

Comfort Digisystem product information

Access DA20



Is able to handle all sound sources in the classroom

Access DA20

Digisystem Access DA20 is able to handle all sound sources in the classroom. It contains three SST radio receivers with full diversity, which can be mixed with sound sources from cables. Full diversity and SST technique guarantees the very best dynamic and sound quality.

DA20 consist of one FM-transmitter with low deviation, and of course the SST-transmitter. The transmitter can receive sound from three different sources.



Unique characteristics

SST (SecureStream Technology) – Digital sound transfer
This unique digital sound transfer between the transmitter and the receiver eliminates all transmission noise. Moreover, the signals are encrypted, so no one can overhear what is being said. Unlike other conventional encrypted systems, SST is free from time lag and crystal clear.



Comfort Audio
HEAR THE FUTURE

Technical facts

Access DA20

General

Size: 252 x 155 x 36 mm incl. antenna

Size: 252 x 130 x 36 mm excl. antenna

Weight: 500 g

Sound processing

Adjustable mixer: For the in-built SST receivers and other sound sources connected via cable.

Special functions

Remote control

Power supply

External mains supply, 230 VAC

User interface

Settings: Via short-cut buttons and navigation knob

Menu languages: English, Swedish, Danish, Norwegian, Finnish, French, German, Dutch

Manual: USB or www.comfortaudio.com

Radio Transmission

SST: Secure Stream Technology – FSK, encrypted digital sound transfer.

Frequencies: SST-receiver 768 - 784.8 MHz

SST-transmitter 852 - 871.6 MHz

FM-transmitter 169.4 - 218 MHz

Range: SST approx. 100 m, FM approx. 30 m

Technical specifications

Type of receiver: 3 st. SST

Type of transmitter: 1 st. SST resp. 1 st. FM

Antenna: Built-in antennas for the receivers (SST), External antennas for SMA pin plug (SST), Telescope with SMA pin plug (FM)

Inputs: AUX - balanced input

LINE IN - unbalanced input

ComLink

Outputs: AUX - unbalanced output,

OUT - balanced output

Remote DA05 (accessory)


With the Remote DA05 it is possible to control the four short-cut buttons on the Access DA20 which enables the user to focus on the wanted source of sound.

Size: 33 mm x 87 mm


Weight: 16 g



Functions:

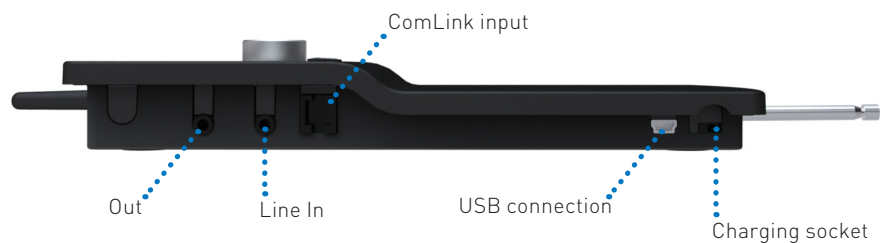

Applications:

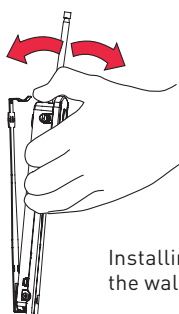

Installing Access DA20 in the wall mounting